

BERGHOFF X7 ELITE CARE INFORMATION



Your BergHOFF X7 Elite is a highly effective blender that has been built to last for years to come. By following our use and care information you will be able to safely operate your X7 Elite and enjoy the benefits of quick and easy soups, smoothies and ice cream.

BEFORE FIRST USE

Before you use your X7 Elite for the first time it is important that you clean your blender jug and lid. You should also ensure that you have read the instruction manual included with your purchase.

OPERATING INSTRUCTIONS

Your X7 Elite will not work unless the jug is sat in the correct position. There is a small piece of plastic on the base of the jug that must sit correctly on the cut out switch on the motor part of the appliance. If you notice any food that needs nudging further into your blender for an even blend, please use the tamper that is provided and keep your hands away from the sharp blades. Make sure that you do not exceed the maximum capacity of the blender jug to avoid spills and overheating. When blending you may wish to lightly hold the top of the X7 Elite, as due to the high speeds it may slightly wobble. To pour food out, please remove the jug from the motor.

CLEANING AND MAINTENANCE



Before you clean any part of the device, unplug it from the wall. Ensure you do not submerge the motor unit in water - if it becomes dirty, clean using a damp cloth. The jug can be placed into the dishwasher, or for a quick and easy cleaning option you can place some water and a small amount of washing up liquid and use the 'Pulse' function to clean thoroughly.

If you are blending food with colouring, you may stain your device. If you notice any staining, wipe the affected areas with vegetable oil before placing into the dishwasher. The blades of the X7 Elite are incredibly sharp, so it is important that you clean with caution, and that you do not lift the lid of the jug until the blades have come to a complete stop. Make sure that when cleaning you do not use any abrasive substances as this can have a detrimental effect on the quality of your X7 Elite over time.

SAFETY PRECAUTIONS

OVERHEATING

Your blender is fitted with a thermal cut-out switch to prevent overheating. If at any time the motor shuts off, please reduce the amount of ingredients within your jug, press the overheat reset button on the base of your motor and unplug the machine for 20 minutes so that it can cool down sufficiently. Blending on high speeds can also prevent overheating.

SUPERVISION

Always unplug your appliance before assembling, disassembling or cleaning. Ensure that if children are operating the device they are supervised as the blades are incredibly sharp.

DAMAGE

Do not let the motor unit, chord or plug become wet or submerged in water - you should also ensure the chord is kept away from hot surfaces. If your chord or plug becomes damaged, do not operate your X7 Elite.